

# Cleaning instructions 2000 S

Please refer to User Manual.

Follow the overview of cleaning interval schedule in Care chapter in the User Manual.  
Prior to the first cleaning, read the User Manual, Care chapter.



**WMF**  
**2000 S**

## Cleaning Program Standard

<p><b>1</b></p> <p>* Touch <b>MENU</b></p>	<p><b>2</b></p> <p>* Touch <b>Care</b></p>	<p><b>3</b></p> <p>The submenu appears. * Touch <b>cleaning prog.</b></p>	<p><b>4</b></p> <p>* Touch <b>switchingOff</b></p>	<p><b>5</b></p> <p>* Touch <b>start</b> The cleaning program starts.</p>
<p><b>6</b></p> <p>* For water rinse prepare 0.5 l of clear, cold water</p>	<p><b>6.1</b></p> <p>* Insert milk hose * Touch <b>yes</b></p>	<p><b>7</b></p> <p>Display with foamer cleaning reminder appears. ▷Foamer cleaning</p>	<p><b>8</b></p> <p>* Remove and empty grounds container</p>	<p><b>8.1</b></p>
<p><b>9</b></p> <p>* Open the manual insert lid * Add a special WMF cleaning tablet</p>	<p><b>9.1</b></p> <p>* Close the manual insert lid</p>	<p><b>10</b></p> <p>Cleaning tablet inserted? * Touch <b>yes</b></p>	<p><b>11</b></p> <p>Foamer cleaning starts. Duration 30 seconds.</p>	<p><b>12</b></p> <p>Mixer cleaning starts. Duration 30 seconds.</p>
<p><b>12.1</b></p>	<p><b>13</b></p> <p>Machine cleaning starts. Duration 8 minutes.</p>	<p><b>13.1</b></p>	<p><b>Step 6 and 10</b> Only if beverages containing milk have been previously prepared.</p>	
<p><b>Step 11</b> Only if beverages containing choc components have been previously prepared with the optional mixer.</p>				

## Foamer cleaning




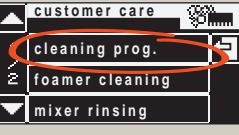

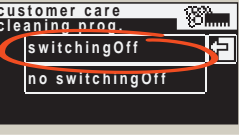
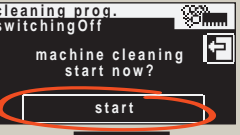
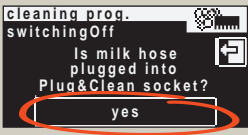

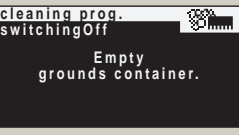
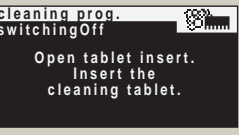
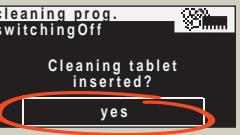
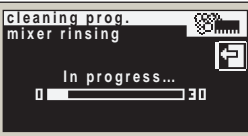
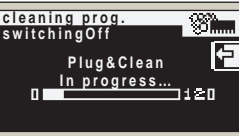



<p>* On submenu Customer Care touch <b>foamer cleaning</b> * Touch <b>start</b></p>	<p>* For water rinse prepare 0.5 l of clear, cold water * Insert milk hose * Touch <b>yes</b></p>	<p>Foamer cleaning starts. Duration 30 seconds.</p>
---	---	---

## Mixer rinsing

<p>* On submenu Customer Care touch <b>mixer rinsing</b> * Touch <b>start</b></p>	<p>Mixer cleaning starts. Duration aprox. 30 seconds.</p>
---	---




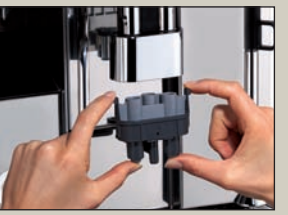

## Plug&Clean cleaning program

<p><b>1</b></p>  <p>* Touch <b>MENUE</b></p>	<p><b>2</b></p>  <p>* Touch  (Care)</p>	<p><b>3</b></p>  <p>The submenu  appears.</p> <p>* Touch <b>cleaning prog.</b></p>	<p><b>4</b></p>  <p>* Touch <b>switchingOff</b></p>	<p><b>5</b></p>  <p>* Touch <b>start</b></p> <p>The cleaning program starts.</p>
<p><b>6</b></p>  <p>⚠ Do not jam the milk hose!</p> <p>* Insert the milk hose with the Plug&amp;Clean adapter into the Plug&amp;Clean socket</p>	<p><b>6.1</b></p>  <p>* Turn the adapter in the socket clockwise until it stops</p> <p>* Touch <b>yes</b></p>	<p><b>7</b></p>  <p>* Push combi spout fully upwards</p> <p>* Remove and empty grounds container</p> <p>* Replace grounds container</p>	<p><b>8</b></p>  <p>* Open the manual insert lid</p> <p>* Add a special WMF cleaning tablet</p>	<p><b>8.1</b></p>  <p>* Close the manual insert lid</p> <p>* Touch <b>yes</b></p>
<p><b>9</b></p>  <p>Mixer cleaning starts. Duration 30 seconds.</p>	<p><b>10</b></p>  <p>Plug&amp;Clean cleaning starts. Duration 2 minutes.</p>	<p><b>10.1</b></p> 	<p><b>11</b></p>  <p>Machine cleaning starts. Duration 8 minutes.</p>	<p><b>11.1</b></p> 

**Step 6 and 10:** Only if beverages containing milk have been previously prepared.

**Step 9:** Only if beverages containing choc components have been previously prepared with the optional mixer.

## Manual combi spout cleaning *Switch off using the ON/OFF button prior to cleaning. Unplug mains plug.*

<p><b>A</b></p>  <p>* Pull forward the lever behind the combi spout</p> <p>* Remove combi spout</p> <p>* Remove milk hose from milk container and release from combi spout</p> <p><i>If a mixer is fitted:</i></p> <p>* Release the mixer hose</p> <p>⚠ <b>Caution!</b> Carefully disconnect the milk hose.</p>	<p><b>B</b></p>  <p>* Immerse the length of the remaining milk hose in the cleaning solution</p> <p><i>This procedure prevents air bubbles from remaining in the milk hose.</i></p> <p>* Soak all parts of combi spout in the cleaning solution</p> <p><i>All parts must be completely immersed.</i></p> <p>* After 5 hours clean all parts thoroughly with a brush</p> <p>* Mix 5 ml of WMF Special cleaner with 0.5 l of warm water</p> <p>* Dismantle combi spout</p> <p>* Immerse one end of the milk hose in the cleaning solution</p>
<p><b>C</b></p>  <p><i>If a mixer is fitted:</i></p> <p>* Rinse mixer hose thoroughly</p> <p>* Reassemble combi spout</p> <p>* Replace combi spout</p> <p>* Insert milk hose</p> <p><i>If a mixer is fitted:</i></p> <p>* Insert mixer hose</p> <p>* Rinse combi spout and milk hose very thoroughly with clear water so that no cleaning fluid remains</p>	<p>⚠ <b>Instructions</b></p> <p><b>Foamer cleaning:</b> See the flip-side under "foamer cleaning" for interim cleaning.</p> <p><b>Manual combi spout cleaning with Plug&amp;Clean:</b> Perform at least <b>once per week</b>.</p> <p><b>Manual combi spout cleaning without Plug&amp;Clean:</b> Perform at least <b>once per day</b>.</p> <p><b>After Plug&amp;Clean cleaning:</b> The cleaned milk hose can be stored with the adapter in the closed cooler.</p>