

Quick reference „Daily cleaning“ combiNationF




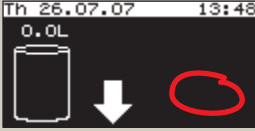
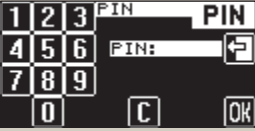
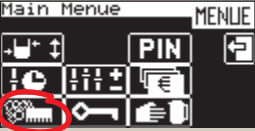
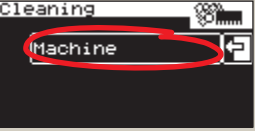
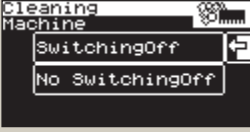
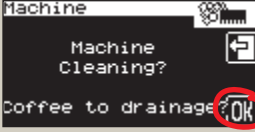


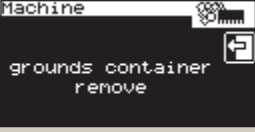

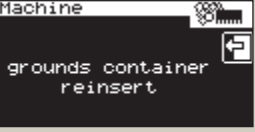
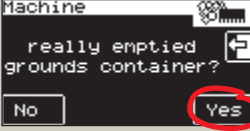
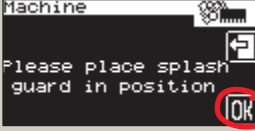


Please refer to user manual combiNationF!

Consider the chapter 3 „cleaning“ in the user manual.
Prior to the first cleaning read the sub-chapter „fully-automatic cleaning“ and „semi-automatic cleaning“.

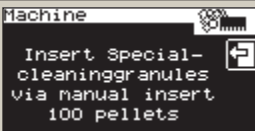

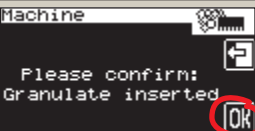
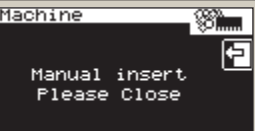
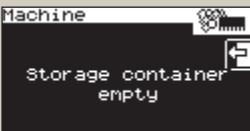
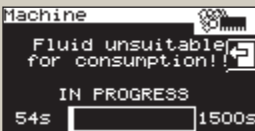



If the fully-automatic cleaning fails, the cleaning has to be done manually and semi-automatically respectively.
In the display appears „settings are changed to manual cleaning“

Fully-automatic cleaning

<p>1</p>  <p>Precondition: cleaning granulate hopper filled!</p>	<p>2</p>  <p>machine is ready. * touch clear pad.</p>	<p>3</p>  <p>with entering PIN * enter PIN and touch cleaning icon in the Main Menu.</p>	<p>4</p>  <p>without entering PIN * touch cleaning icon.</p>	<p>5</p>  <p>* touch Machine.</p>
<p>6</p>  <p>choose one option.</p>	<p>7</p>  <p>* confirm cleaning with OK or touch  and dose coffee via .</p>	<p>8</p>  <p>* empty and clean grounds container.</p>	<p>9</p>  <p>* take out and clean the removal sieve.</p>	<p>10</p>  <p>* reinsert grounds container.</p>
<p>11</p>  <p>* insert emptied grounds container and confirm with „Yes“.</p>	<p>12</p>  <p>* place splash guard below and confirm with OK.</p>	<p>13</p> <p>automatic metering is running. automatic emptying is running.</p>	<p>14</p>  <p>cleaning is running for ca. 25 min.  Do not drink or use fluid!</p>	

Semi-automatic cleaning or „manual cleaning“ when granulate dosing mechanism is defective

<p>Step 2-12 same as „fully-automatic cleaning“</p>	<p>13</p>  <p>manual insertion cleaning granulate (100 pellets for F, 200 pellets for F2).</p>	<p>14</p>  <p>* open manual insert and insert cleaning granulate.</p>	<p>15</p>  <p>* confirm insertion with OK.</p>	<p>16</p>  <p>* Close manual insert.</p>
<p>17</p>  <p>emptying is running.</p>	<p>18</p>  <p>cleaning is running for ca. 25 min.  Do not drink or use fluid!</p>			